

F220 Fire Alarm Control Panel



- Instant Fire Alarm Location** – Easy to read large-text 7” colour display
- Power and Flexibility** – User-friendly operation
- Rapid Configuration** – Economical, intuitive installation
- Hi-Capacity Network** – Up to 133 panels per F220 & Net2 network


Product Overview

The Pertronic F220 is a modular, expandable, networkable, intelligent fire panel which displays the exact location of any alarm or other signal activation in a user-friendly format that streamlines the management of critical situations.


The F220 uses a 7 inch (180 mm) 800 x 480 pixel colour display to unmistakably identify the panel status. Red status bars and large easy-to-read text descriptors clearly identify the alarm mode. Defect information, device isolation information, pre-alarm conditions, walk test, ancillary and system information all have their own unique coloured display screens, providing comprehensive easy to use information for all users including fire brigade personnel, building managers, and service technicians.

Up to 133 F220 fire panels may be connected in a fast, robust, Pertronic Net2 Network system. A full range of LCD and LED mimics provide remote control and display capabilities for single panels or networks.


The F220 is compatible with the Pertronic FireMap® graphical user interface. Multiple event logs in the F220 provide all users with powerful diagnostic information.

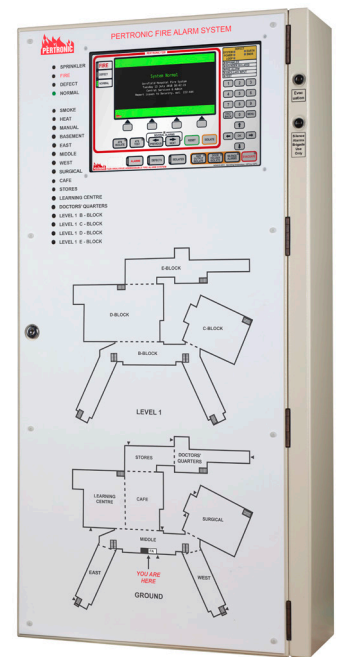


F220 Fire Alarm Control Panel in 900mm Cabinet

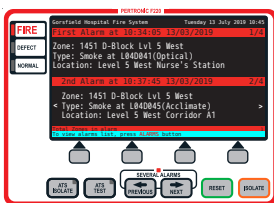

Alarm Screen

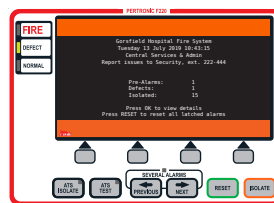

Pre-Alarm Off-Normal Screen

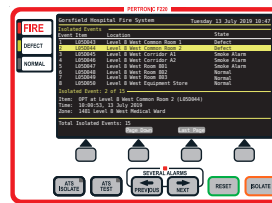

Isolation List Screen

Standard Features

- > Seven-inch 800 x 480 pixel TFT LCD colour display
- > Easily readable 5 mm text height on Alarm screen
- > Monitors and controls up to 3,180 sensors, and 1,980 input / output modules, manual call points, or addressable warning devices
- > Automatically identifies the exact alarm location
- > Colour-coded status and event display
- > Separate keyboard frees the entire screen area for display of fire system information
- > Auto-scrolling alarm view provides details of multiple alarms without user action
- > Evacuate button triggers a trial evacuation
- > Multiple panels may be connected in a high-speed, defect-tolerant Pertronic Net2 Network system
- > High-speed configuration file upload/download (less than 30 seconds) via Ethernet or USB memory stick
- > PC interface programming and interrogation with the user-friendly Pertronic FireUtils® application
- > Serial buses (RS-485) for interfacing to LCD and LED mimics and ancillary peripheral devices
- > Interface for phased evacuation system ("EWIS")
- > Virtual detection makes best use of information from intelligent sensors to combine maximum alarm sensitivity and excellent nuisance alarm immunity
- > Specialised history logs retain critical information even after large numbers of minor events
- > User can isolate individual sensors, loop devices, zones, local buzzer, timers, logic blocks, and network inputs
- > Compatible with a full range of peripherals including sounders, strobes, audio-visual signs, amplifiers, speakers, audible warning and evacuation systems, and Ethernet and SMS (text-messaging) interfaces
- > Brigade transmitter *Isolate* and *Test* switches
- > A stand-alone Pertronic F120A system is easily upgraded to an F220 system
- > Large range of cabinet sizes
- > Customised assembly options
- > An F220 panel has been certified compliant with NZS 4512:2010 by an IANZ-accredited laboratory
- > FPA NZ listing number PI/125

F220 Options

Internal Options

Pertronic Industries supply an extensive range of options for the F220 fire panel. The number and type of internal options required for a specific project will affect the choice of cabinet size, power supply current rating, and battery capacity.*

The following list outlines the popular F220 internal options:

Two-Loop Driver (F120P2LMB)

Provides two analogue addressable loops.

AA Multi-Function Loop Responder (AALR-MF)

Provides eight conventional detection zone or switch input circuits with one relay configurable as Form C clean contact or supervised 100 Volt Line output.

Addressable Loop Relay (F100LRU)

Provides four outputs, individually configurable as supervised or voltage-free relay contacts. Also provides an input for supervising the defect signal from an external power supply.

AA Isolator Board (8SAAIB)

Provides eight isolated analogue addressable loop spurs. Allows conventional fire alarm zones to be converted to analogue addressable spurs using the existing cable, when upgrading from a conventional to an intelligent fire panel.

Evacuation Amplifiers

Complete with evacuation tone generator and a single supervised 100 Volt Line output for speakers:

- > 20 Watt (EVAC20W24V),
- > 50 Watt (EVAC50W24V),
- > 120 Watt (EVAC120W24V).

(Note that the 120 Watt amplifier requires the evacuation tone generator)

Hand-Held Microphone and cradle, mounted on front panel.

Accessories

A full range of accessories is available for the F220, including the range of F220 Mimics. Please refer to the Pertronic website or contact Pertronic for more information.

Evacuation Tone Generator (EVACGEN-NZ)

Provides inputs for local and remote microphones, evacuation tones, standard or custom evacuation messages. Supervises audio amplifiers.

Audio Distribution Module (ADM-2, ADM-4)

Provides multiple audio channels from a single 100 Volt line. All channels are continuously supervised for line defects. A line defect on any channel does not prevent operation on other channels. An F220 may be fitted with multiple Audio Distribution Modules.

Emergency Warning and Information System (EWIS)

Audible voice evacuation and emergency intercom system.

Special Purpose Control Units

- > 8 Way Solenoid Test Control
- > 8 Way Zone Isolate Switch

Special Purpose Displays

A range of special purpose LED displays is available for the F220. The displays are designed to satisfy specific project requirements. Please contact Pertronic Industries for more information about special purpose control units and displays.

Bell Monitor Board (ZMB24V)

Provides additional supervised outputs for warning devices such as strobes, sounders (bells), and audiovisual signs.

Network Card (NET2CARD)

Interface with other F220 panels over a Pertronic Net2 Network system, via fibre-optic or copper (RS-485) connections.

Also provides an interface between an F220 & Net2 Network and a building management system (bi-directional Modbus over Ethernet), FireMap, or a Printer, Paging System, or other text-based system. (Note: When used as an interface with BMS, FireMap, or Text-based systems, the NET2CARD may not be used to interface an F220 fire panel with the Net2 Network. Each BMS, FireMap, or Text interface requires an additional, dedicated NET2CARD.)

Ethernet Gateway (NET2GATE)

Interface with any Ethernet network including a virtual private network (VPN). The Ethernet Gateway provides an interface for Pertronic FireMap® graphical user interface.

Ancillary Peripherals

- > 48-way Open Collector Board
- > 8 Way Relay Mimic
- > 8 Way Common Relay Board
- > Auxiliary Panel Relay (2-pole 4-amp 24 V dc form C contact)

General Purpose Interfaces

BACNet, Modbus, Nurse Call Pager, Printer, Serial Text-Based Systems.

Fibre Optic Interface Adaptors


Available for RS-232, RS-485, or Ethernet.

24 V dc Door Holder Power Supply

2 amp, 5 amp, 10 amp

* The fire panel's maximum total current consumption, including any auxiliary power outputs, must not exceed the power supply's load capacity. Most optional components draw their maximum current when the system is in Alarm mode. The Pertronic web-site (www.pertronic.co.nz) provides a calculator for computing supply current and battery capacity.

F220 System Diagram

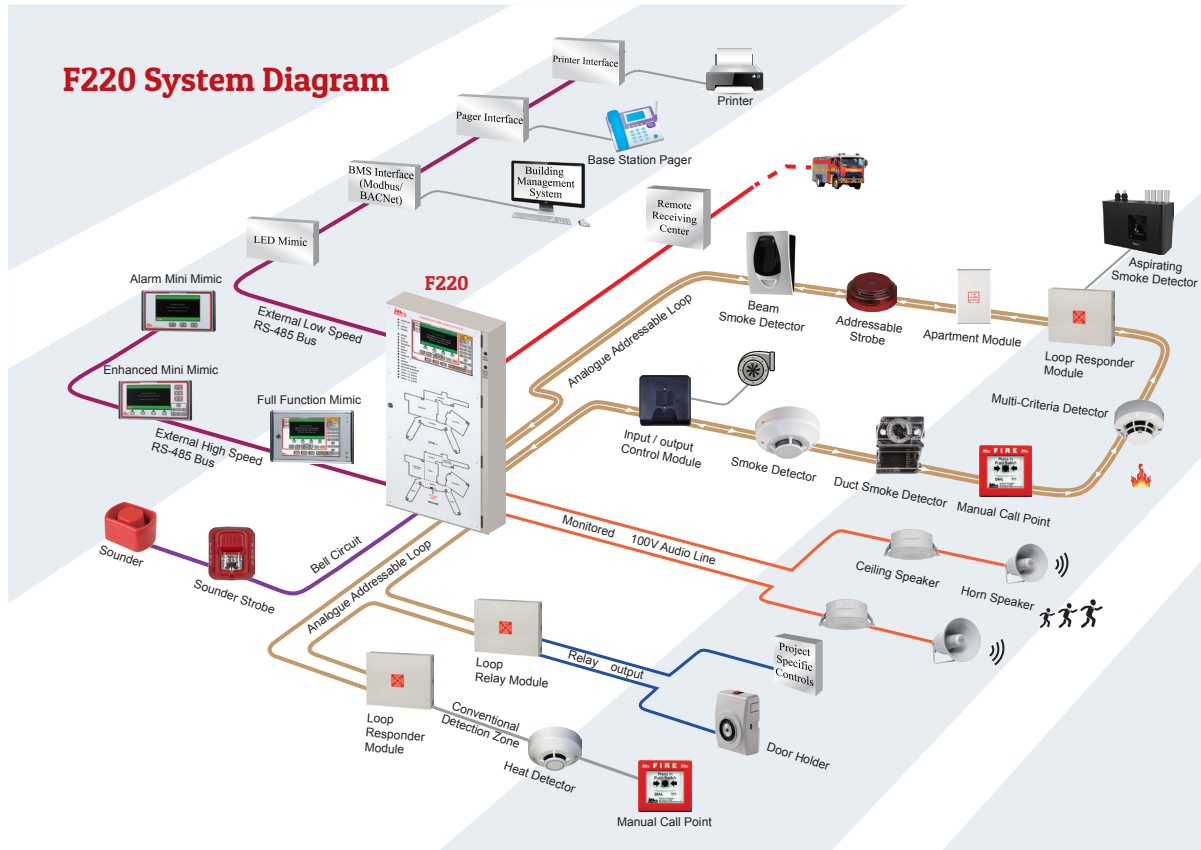

F220 Specifications

Processor (Masterboard)

- 32-bit 456 MHz RISC processor
- 4.128 Gbit flash memory
- Linux operating system

Display

- 7 inch 800 x 480 pixel colour TFT-LCD
- 32-bit 64 MHz RISC processor

Power Supply Output Current

- 24 V dc 4 Amp PSU 4.0 A
- 24 V dc 12 Amp PSU 12.0 A

Maximum Battery Size

- 900 mm Cabinet 24 Ah
- 900 mm Double Cabinet 24 Ah
- 28 U Rack Cabinet, 40 U Rack Cabinet 55 Ah

Relay Contact Ratings (Resistive Load)

- Fire, Defect, Isolate, General Purpose, Aux 2 A @ 30 V dc
- Door Holder 5 A @ 30 V dc

Supervised Outputs

- AUXM Relay, O/P 1, O/P 2 2 A @ 28 V dc
- 2 Circuits (Bell 1 and Bell 2) 5 A @ 28 V dc

RS-485 Mimic Buses

- External High Speed RS-485 (data) 115.2 kbit/s (power) 1.4 Amp
- Low Speed RS-485 (data) 9,600 bit/s (power) 1.4 Amp

Communication Ports

- Ethernet 10/100 Mbit/s
- RS-232 (auto-adapting) 9.6 or 115.2 kbit/s
- USB Port USB 2

Analogue Addressable (AA) Loop Circuits

- Number of Loops 2 to 20, in 2-loop increments
- Sensors Up to 159 per loop
- Input/output modules, addressable sounder devices, or MCPs Up to 99 per loop
- Loop Current 350 mA (maximum)
- Loop Resistance 50 Ω (maximum)
- Length Up to 2500 metres end to end, with appropriate configuration

Loop configuration must be verified using the loop calculator at <http://www.pertronic.co.nz/>

Operating Temperature

-10 °C to +50 °C

Humidity

≤ 95 % RH, non-condensing

F220 Cabinet Dimensions

	Height mm	Width mm	Depth mm	Protrusion mm	LEDs (max)	
900 mm Cabinet	900	450	130	6 (Lock)	FS: 52 RS: 60	<ul style="list-style-type: none"> • Optional document holder available on 28U and 40U. • Specified depth is measured to front face, excluding the index. Some fittings protrude forward of the front face. • Most cabinets are supplied with a blank white index fitted to the front (FS) or rear (RS) of the cabinet. The index increases the cabinet depth by 3 mm. • Max. LEDs includes sprinkler, fire, defect, and normal LEDs. • Other cabinet sizes and styles available for special orders.
900 mm Double Cabinet	900	800	130	6 (Lock)	FS: 60 RS: 172	
28U Rack Cabinet	1330	575	385	6 (Lock)	na	
40U Rack Cabinet	1865	575	385	6 (Lock)	na	

F220 Software Features

- > Configurable from front panel, PC or USB stick
- > Numeric keypad for rapid information retrieval and efficient front panel configuration
- > Configurable text descriptors for: loop devices (sensors, modules, MCPs, & addressable alarm devices); zones; air handling (fan) controls; deluge controls; logic blocks; timers, network inputs, external fault input
- > Nuisance alarm management facilities:
 - > NZS 4512:2010 Type 5
 - > Alarm Verification Function (AVF)
- > Multiple configurable action levels per sensor (with appropriate sensor types)
- > Sensor pre-alarm and maintenance warnings
- > Individual sensor dual sensitivity for configurable day or night settings
- > Automatic clock adjustment for daylight saving
- > The time-zone can be configured
- > Auto-Learn function for fast loop configuration
- > Automatic system test of charger, batteries and sensors. The test may be configured to occur at any one time of the day
- > Configurable Force Output feature to allow manual activation of output, even if isolated
- > Cause & effect logic may be configured to isolate specified devices in response to defined events
- > Versatile loop device test capability
- > Fire panel door interlock switch
- > Memory Lock switch prevents configuration data from being over-written
- > System maintenance and analysis reports may be exported via Ethernet in pdf, Excel, or Word formats (Please refer to the FireUtils® datasheet for details)

F220 Capacity (per fire panel)

- > Analogue Addressable Loops up to 20
- > Intelligent Sensors 3,180 (max.)
- > Intelligent Modules, MCPs & Addressable Alarm Devices 1,980 (max.)
- > Up to 999 consecutively numbered zones per F220 panel, within the range 1 to 64999
- > Air Handling (Fan) Controls 400
- > Deluge Controls 400
- > Cause-Effect Logic Blocks 999
- > Timers 50
- > Groups 999
- > Network Inputs 999
- > Multiple Unique Panel History Logs*
 - Main All Event Log 10,000 events
 - Alarm Log 2,000 events
 - Pre-Alarm Log 500 events
 - Defect Log 500 events
 - Ancillary Log 500 events
 - Isolation Log 500 events
 - Isolation Activity Log 500 events
 - Active Event Log 500 events
 - System Event Log 500 events
 - Power Supply (PSU) Log 5,000 entries (Each PSU log entry includes: Time, system voltage, and battery voltage.)

* In total the panel history logs can store up to 20,500 entries. Logs may be saved to a USB stick or imported to a PC running FireUtils®, for more detailed filtering and analysis of events.

Ordering Information

Product Code	Description
F220FS	F220 Front Service Two-Loop Panel in 900mm H x 450mm W Panel with 4A PSU
F220RS	F220 Rear Service Two-Loop Panel in 900mm H x 450mm W Panel with 4A PSU
F220TPC	F220 Two-Loop Panel in 900mm Cabinet, without Indexes, with LCD window, 4A PSU
F220FSDC	F220 Front Service Two-Loop Panel in 900 mm x 800 mm Double Cabinet with 4A PSU
F220RSDC	F220 Rear Service Two-Loop Panel in 900 mm x 800 mm Double Cabinet 4A PSU
F220DC	F220 Two-Loop Panel in 900 x 800 Double Cabinet, without Indexes, with LCD window, 4A PSU
F220-28UN	F220 Two-Loop Panel in 28U Rack Cabinet with 4A PSU
F220-40UN	F220 Two-Loop Panel in 40U Rack Cabinet with 4A PSU
F220-40UN-12A	F220 Two-Loop Panel in 40U Rack Cabinet with 12A PSU
F120P2LMB	F120 & F220 Two-Loop Driver Board

The information in this document must not be treated as partial or complete instructions for the design, construction, installation, commissioning, or maintenance of fire detection, fire alarm, or building evacuation systems. Fire and evacuation systems must be designed and installed by properly qualified persons, in accordance with all regulatory requirements.

Unless explicitly stated otherwise, this document provides typical specifications and nominal dimensions. Actual product performance and dimensions may vary. All information in this document is subject to change. Please consult Pertronic Industries or visit our web site for up to date information.

PERTRONIC® is a registered trademark of Pertronic Industries Limited.

