



Networked Fire Alarm Panels

Head Office

Wellington

PO Box 35-063
Naenae
17 Eastern Hutt Rd
Wingate
Lower Hutt
Tel (04) 567-3229
Fax (04) 567-3644

www.pertronic.co.nz

sales@pertronic.co.nz
tech@pertronic.co.nz

Auckland Office

PO Box 15-867
New Lynn 0640
359 Onehunga Mall
Onehunga
Auckland
Tel (09) 633-0226
Fax (09) 633-022




ISO 9001: 2000

International Standards
Certifications
QAC/R61/0051

Product Overview:

The **Pertronic Network System** can connect up to 99 nodes using the two-wire RS485 data communication loop connected to network cards at each panel or display. 34 nodes can be **Pertronic F100A** or **F120A** fire panels. The network is fault tolerant so that a single break or short-circuit anywhere in the communication loop will not compromise the operation of the system.

A computer may be connected to any of the network cards to configure and program the network.

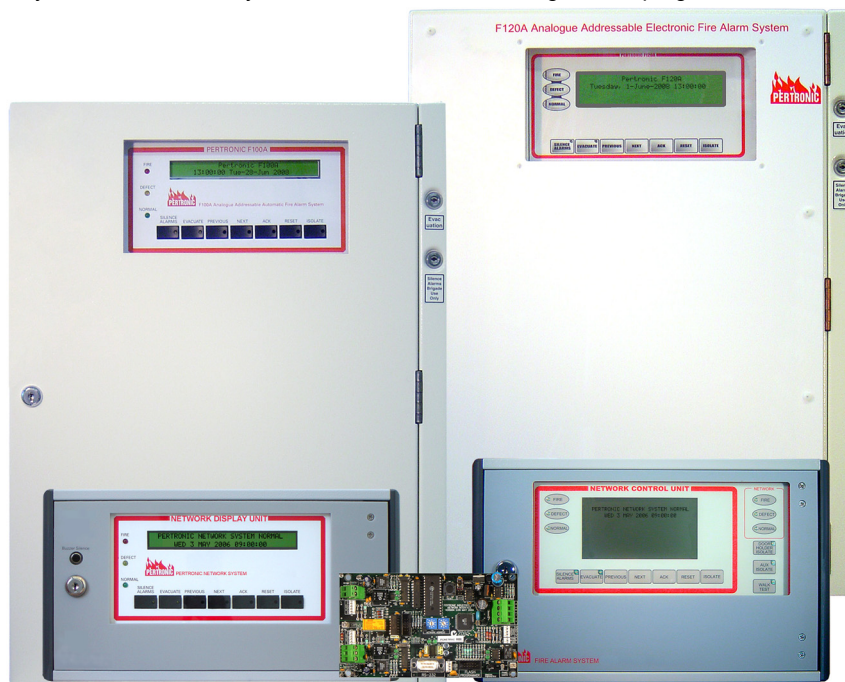

Panel-to-Panel Mapping:

A device at one panel may be mapped as a network input to one or more of the other panels for 'Alarm' indication or to activate system relays or other mappable outputs. For example, a detector on Panel 3 can be mapped to Panel 5 to activate the evacuation sounders and, for example, Relay 23 on Loop 2.

Up to 64 network inputs may be used for **F100A** panels, and up to 128 network inputs for **F120A** panels.

Supervisory:

Network Card: network cards may be supplied with either **Panel** or **NCU** firmware.

Network Card – Panel (NETCARD): may be configured as a:

- **Panel Network card:** interface the system information from individual Fire Panels to the network.
- **Network LED Mimic card:** drive up to 8 **LED Display Mimics** using either **12-Way Smart LED Mimic** or **LED Address Controller (LAC)** boards.
 - Up to 128 LEDs may be displayed.
 - The 'BCO' and 'Evacuation' key-switches at the 12-Way LED Mimic or LAC boards operate globally around the network.
 - The global system LEDs operate normally to reflect the network status.

Network Card – NCU (NETCD-NCU):

- Can connect to 1 x **Network Control Unit (NCU)**, up to 8 x **Network Display Units (NDU)** or 1 **Pager** system:

Network Display Unit (NDU):

- Displays all alarms, network inputs and pre-alarms by device descriptor and panel location (Alarm, Network and Pre-Alarm queues).
- Allows 'Reset' and 'Isolation' of alarms and network inputs from the relevant queue.
- Isolate queue: indicates all devices that have been isolated across the network.
- Network Fault queue: indicates fault conditions specific to the network.
- Panel Fault queue: indicates the panels, which have fault conditions and the number of faults.
- System Event queue: displays system events eg. 'Silence Alarms', 'Evacuate', etc. for each panel.

Network Control Unit (NCU):

- Includes all of the functions of the NDU plus the ability to select any panel on the network and control its functions directly.
- All menu items of the selected panel may be accessed – status, history log, etc.


Pager:

- Queue events may be configured as outputs to a paging system or network printer.

Network Card Specification:

- Dimensions:** 166 x 96 mm. Mounting holes at centres 153mm horizontal, 89mm vertical; mounted in the cabinet.
- Power:** Supplied from the panel RS485 connection: 27Vdc, 75 mA (V2.20), 27Vdc, 55mA (V2.09)
- Connection:** Up to 99 network cards may be connected as a network (addresses 1 to 99). These may be a mixture of **Pertronic F100A** and **F120A** panels, and supervisory displays. The RS485 network data path is a daisy-chained continuous loop using EVACCBL cable. The maximum distance between adjacent network cards is 1.0km. Any network card that loses power or becomes inoperative will automatically be isolated from the network.
- Integrity:** The network uses isolated RS485 drivers between Network Cards, eliminating Earth loop problems and providing high noise immunity. The network system continues to operate with full functionality in the event of single loop shorts and loop breaks.
- LED Mapping:** LED outputs from each panel may be mapped to Network Inputs of one or more other panels. The **F100A** can accept 64 Network Inputs; the **F120A** and **LED Mimic** 128 Network Inputs.
- Supervisory:** NCU and NDU supervisory displays maintain Alarm, Network Input, Pre-Alarm, Isolate, Fault, and System Event queues from information received from the networked panels. The NCU can also control other panels on the network by establishing a link through the network.
- Response:** RS485 data on the network is transmitted at a rate of 384kbps. For a full (99 network card) system, the maximum transmission time for alarm and other data to reach any point on the RS485 network is less than 2 seconds.

Connection Diagram:

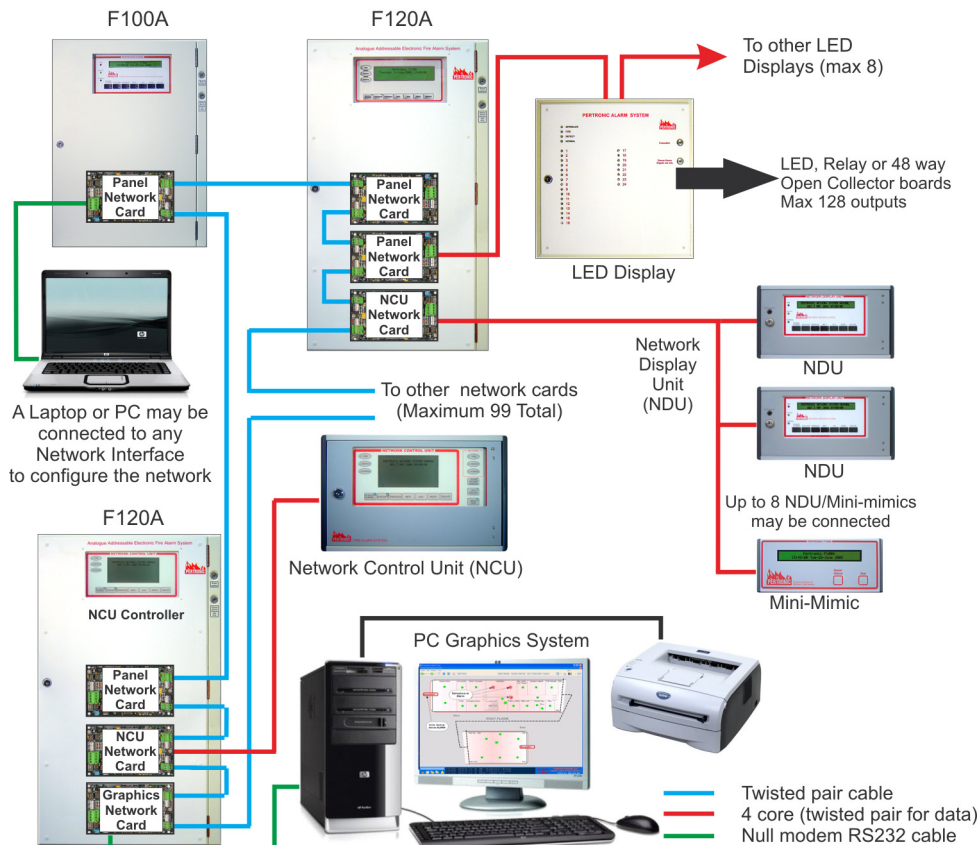

Network System with Supervisory Network Cards

Product Code:

Product Description	Code
Network Control Unit	NETCUNZ
Network Display Unit	NETDU
Network Card – Panel or Network LED Mimic	NETCARD
Network Card – Supervisory (for NDU, NCU, Graphics System or pager)	NETCD-NCU
Evacuation Amplifier Cable: 1.25mm ² Grey Twisted-Pair; 200m Drum	EVACCBL
SGD Cable Internal: Twisted Pair @ 0.5mm ² ; 2 Core @ 0.8mm ² ; 250m Drum	SGDCI
SGD Cable External: Twisted Pair @ 0.5mm ² ; 2 Core @ 1.13mm ² ; 500m Drum	SGDCE
SGD Cable Internal (Fire Rated): Twisted Pair @ 16/0.2mm ² ; 2 Core @ 16/0.2mm ² ; 100m Drum	SGDCIFR

PERTRONIC INDUSTRIES LTD

Head Office:
 17 Eastern Hutt Rd, Wingate, Lower Hutt
 Tel (04) 567-3229 Fax (04) 567-3644

www.pertronic.co.nz
 sales@pertronic.co.nz
 tech@pertronic.co.nz

Auckland Office:
 359 Onehunga Mall, Onehunga, Auckland
 Tel (09) 633-0226 Fax (09) 633-0228

'Pertronic' and 'Firetronix' are registered trademarks of Pertronic Industries Ltd